


Box: PLOCK 2

BIKE	Triumph Speed Triple 1050	PART NO.	RTR-60
YEAR	2005-10	FIT KITS	Z039.20469
NOTES	Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	2 x SCEXDBK23 -(Type V)

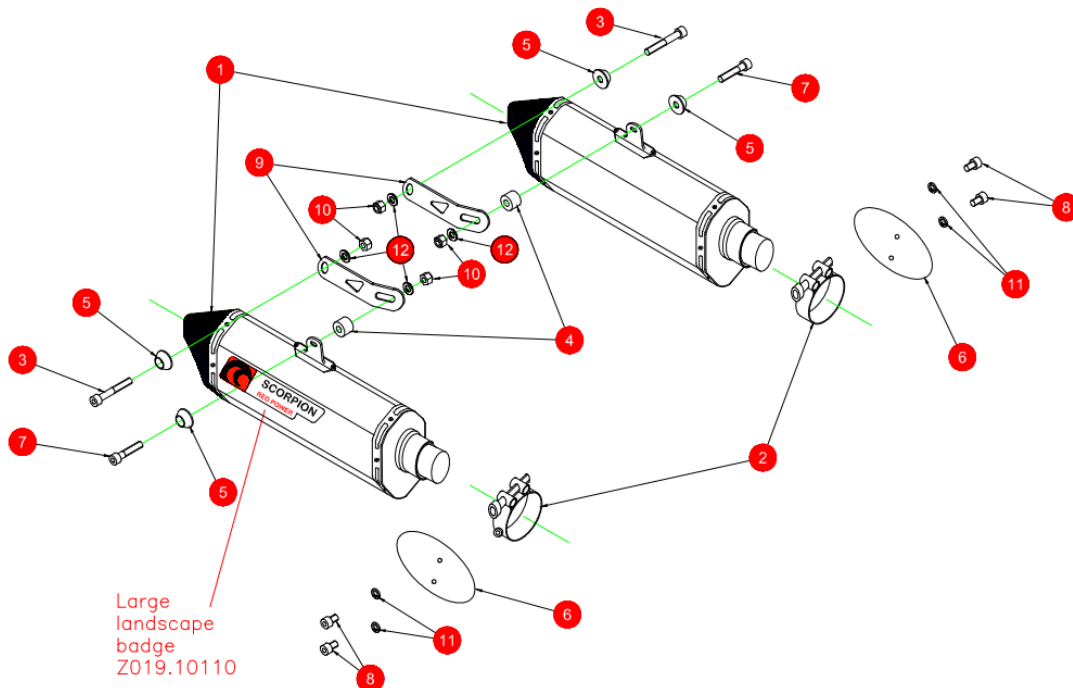

1 2 x 250mm Serket Silencers RSC250 (with intergrated CP625)  
 2 2 x Heat Shield Clamps 43-47mm (Z028.20162)  
 3 2 x M8x55mm Cap Head Bolts (Z017.10079)  
 4 2 x 15mm Aluminium Spacers (Z026.10005)  
 5 4 x Aluminium Bolt Finishers (Z026.20068)  
 6 2 x Triumph Speed Triple Heat Shield (Z015.30935)

7 2 x M8x40mm Cap Head Bolts (Z017.10076)  
 8 4 x M6x8mm Button Heads (Z017.10001)  
 9 2 x Silencer Mounting Brackets (Z015.30936)  
 10 4 x M8 Nyloc Nuts (Z017.10062)  
 11 4 x M6 Spring Washers (Z017.10027)  
 12 4 x M8x17mm Washers (Z017.10068)

E-MARK ROUND	N/A
E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	03
DATE	04/08/21
AUTHORISED	M.Ydlibi
CHECKED	

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.