
Box: PLOCK 1	]		FITTING INSTRUCTIONS 1
BIKE	SUZUKI GSXR 600 W V	PART NO.	ESI - 56
YEAR	1997 - 2000	FIT KITS	OVAL Z039.11078 // ROUND Z039.10078
NOTES	Ensure billet is fitted with M8 x 16 cap heads & spring washers prior to despatch	DB-Killer	SCEXDBK12 - (Type B)

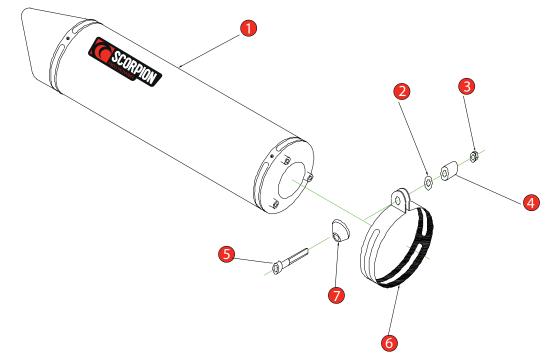

- 1 450mm Silencer (R-ZE40.03A) (O-ZE40.04A)
- 2 M8 X 25mm Washer (Z017.10825)
- 3 M8 Nyloc Nut (Z017.10062)

I

- 4 10mm Spacer (Z026.10004)
- 5 M\* x 60mm Cap Head Bolt (Z017.10080)
- 6 Composite Strap (R-Z038.10090) (O-Z038.10088)
- 7 Aluminium Bolt Finisher (Z026.20068)

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

E-MARK ROUND	SCDB-RB e4 2103		
E-MARK OVAL	SCDB-OB e4 2104		
ISSUE NO.	06		
DATE	14/12/2018		
AUTHORISED	J.Harkin		
CHECKED			

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

