



BIKE	BMW F800 GT, 2013-19 / F800 R, 2009-19	PART NO.	RBM-71
YEAR	2013-19 / 2009-19	FIT KITS	Z039.10500
NOTES	Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	SCEXDBK23 - (Type V)

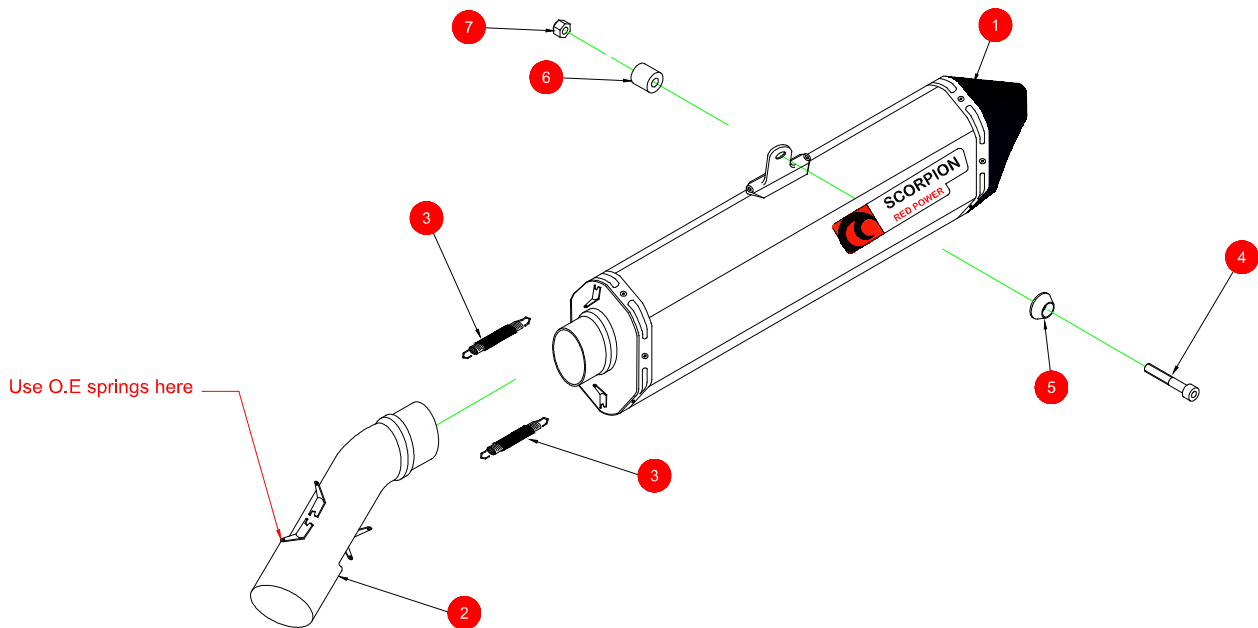

- 1 400mm Serket Silencer RSC277
- 2 Connecting Pipe CP747
- 3 2 x Rubber Coated Springs (Z028.10030)
- 4 M8x50mm Cap Head Bolt (Z017.10078)
- 5 Alloy Bolt Finisher (Z026.20068)
- 6 20mm Alloy Spacer (Z026.10006)
- 7 M8 Nyloc Nut (Z017.10062)

E-MARK	SCDB-OS  2072
ISSUE NO.	1
DATE	28/09/2018
AUTHORISED	J.Harkin
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

Cleaning instructions overleaf:

Box: PLOCK 1

BIKE	BMW F800 GT/R	PART NO.	RBM-71
YEAR	2013-on	FIT KITS	Z039.10500
NOTES		FEATURES	DB KILLER:- Z038.10043(V)

Thank you for purchasing your Scorpion Silencer.

Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Für den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.

Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

"Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes."