


| | | | |
|--------------|---|------------------|---------------------------------|
| Bike | Yamaha Tenere 700 | Part No. | RYA-122-MA |
| Year | 2021-Current | Fit Kit | Z039.10719 |
| Notes | Where not supplied use original fittings. Remove Gasket for OE Silencer or Scorpion Slip-on. | dB Killer | dB-Killer provided with Slip-on |

Estimated Fitting Time: 60 Minutes


OE Exhaust Port Gaskets must be kept.

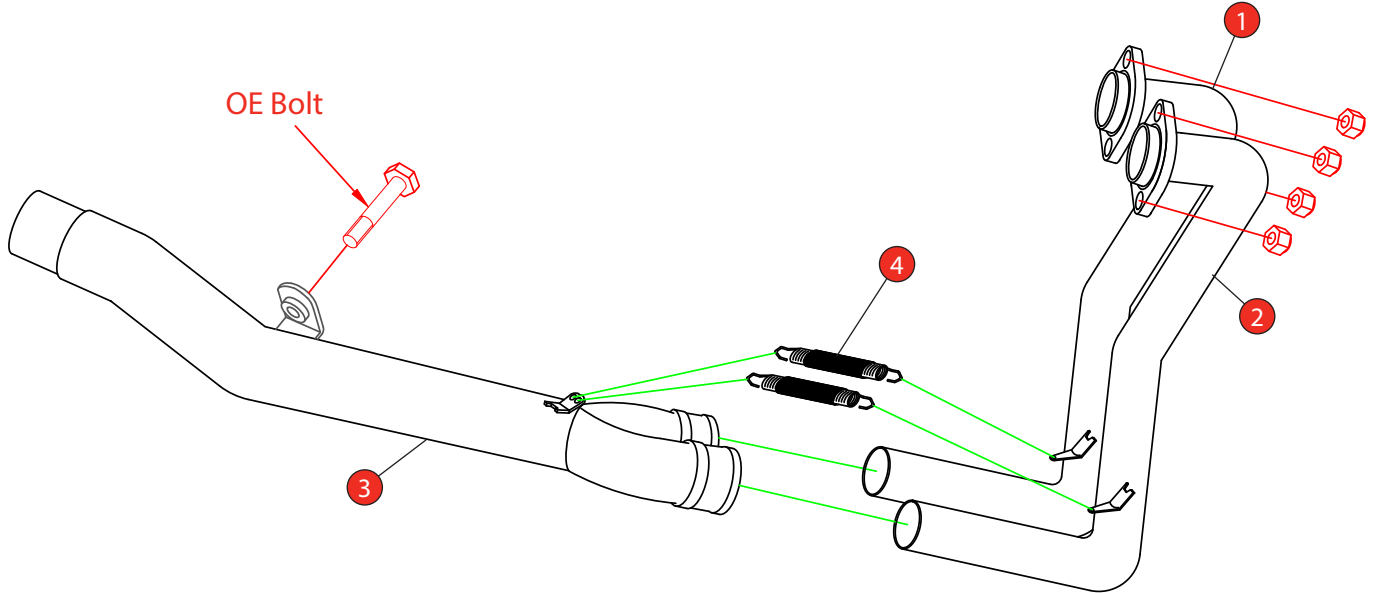

| NO. | PART NO. | DESCRIPTION | QTY |
|-----------------------------|------------|--|-----|
| 1 | CP1064 | L/H Header Pipe | 1 |
| 2 | CP1065 | R/H Header Pipe | 1 |
| 3 | CP1066 | Connecting Pipe | 1 |
| Fit Kit - Z039.10719 | | | |
| 4 | Z028.10030 | Rubber Coated Spring | 2 |
| 5 | Z024.11139 | Lambda Extension Cable (Not shown above) | 1 |


| | |
|----------------|------------------------|
| CLASSIFICATION | Closed Circuit Product |
| HOMOLOGATED | NO |
| DATE | 23/11/2022 |
| ISSUE | 00 |
| AUTHORISED | S Shipley |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

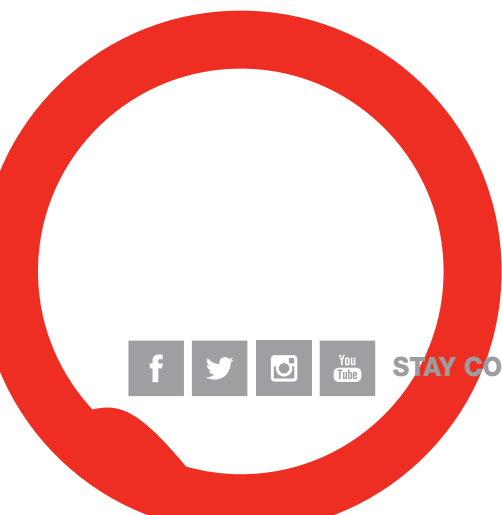

STAY CONNECTED TO RED POWER.

| | | | |
|-------|---|-----------|---------------------------------|
| Bike | Yamaha Tenere 700 | Part No. | RYA-122-MA |
| Year | 2021-Current | Fit Kits | Z039.10719 |
| Notes | Where not supplied use original fittings. Remove Gasket for OE Silencer or Scorpion Slip-on. | dB Killer | dB-Killer provided with Slip-on |

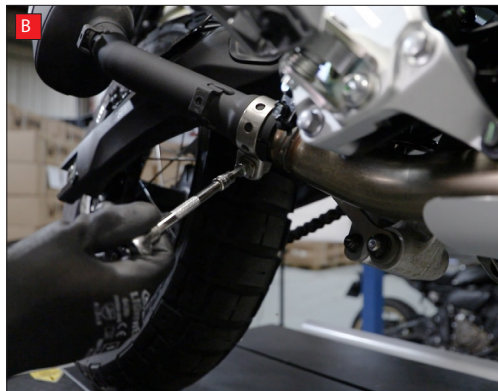

A) If fitting at the same time as the Scorpion Slip-on start by removing the heat shield from the original exhaust.

B) Loosen the clamp between the rear silencer and centre section and remove the bolt.


C) Loosen the rear silencer mounting bolt/nut. Support the weight of the silencer and remove the bolt.



D) Carefully remove the silencer from the bike. If the gasket stays on the original centre section remove it as it's not required with the Scorpion headers.

E) Support the weight of the skid plate and remove the 4 mounting bolts (2 each side) then carefully remove it from the bike.

F) Remove the side panel lower mounting screw.

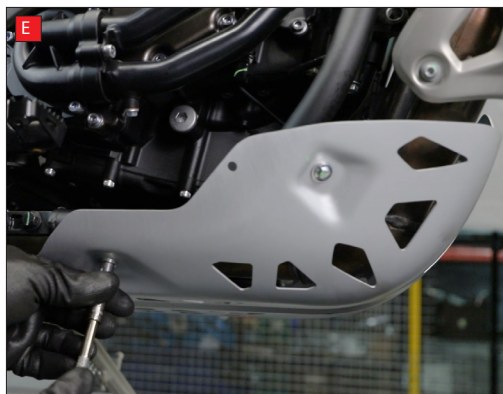

G) Remove the side panel upper mounting screw.

H) Remove the mounting screw in front of the indicator.




| | | | |
|-------|---|-----------|---------------------------------|
| Bike | Yamaha Tenere 700 | Part No. | RYA-122-MA |
| Year | 2021-Current | Fit Kits | Z039.10719 |
| Notes | Where not supplied use original fittings. Remove Gasket for OE Silencer or Scorpion Slip-on. | dB Killer | dB-Killer provided with Slip-on |



I) Remove the 3 plastic screws attaching the radiator cover to the side panel.

J) Pull the side panel away from the bike slightly so that you can get behind it to unplug the indicator wiring and then completely remove the panel from the bike.



K) Remove the 2 mounting screws and the push clip from the inner side panel and remove it from the bike.

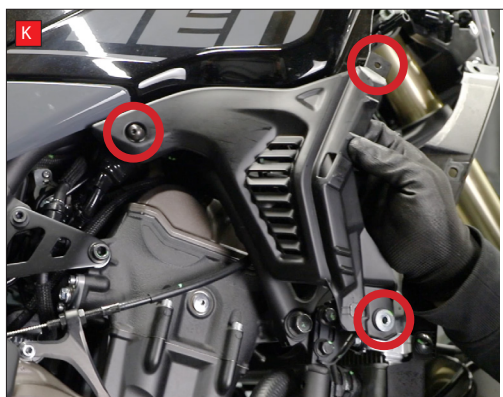

L) Trace the lambda sensor wiring back to the plug behind the cover you removed in the previous step and disconnect it. Unclip the wiring and free it from the bike.

M) On the left side of the bike remove the exhaust mounting bolt.

N) Support the weight of the exhaust system and remove the 4 header nuts. Keep the nuts safe as you will re-use them when fitting the Scorpion headers.

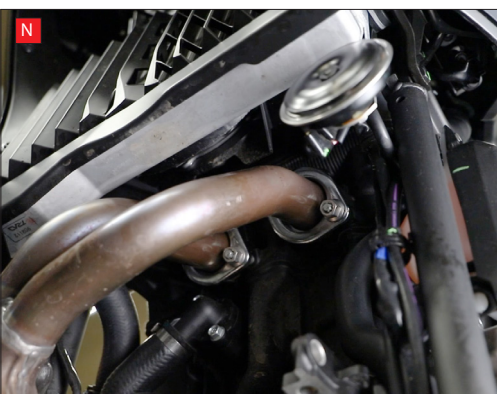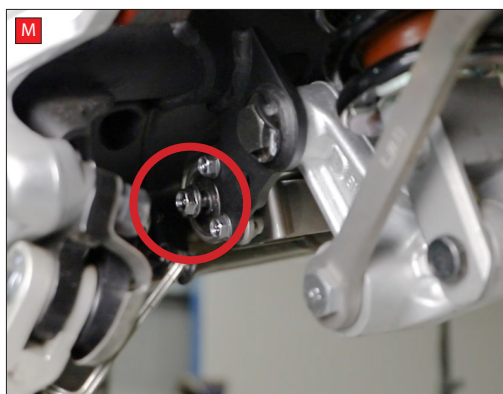

O) Carefully remove the system.

P) Remove the lambda sensor from the OE exhaust. You will fit this into the Scorpion Headers in a later step.




| | | | |
|-------|---|-----------|---------------------------------|
| Bike | Yamaha Tenere 700 | Part No. | RYA-122-MA |
| Year | 2021-Current | Fit Kits | Z039.10719 |
| Notes | Where not supplied use original fittings. Remove Gasket for OE Silencer or Scorpion Slip-on. | dB Killer | dB-Killer provided with Slip-on |



Q) Plug the supplied Lambda extension cable into the original wiring and feed it through the same path that the original cable took. Secure it in place with the original clips.

R) Install the Scorpion headers with the original nuts. Leave slightly loose to allow adjustment, you will tighten them fully in a later step.

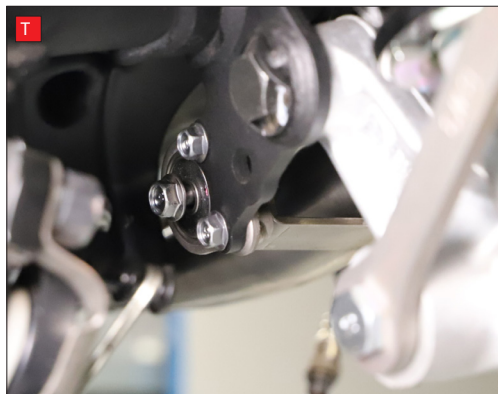

S) Slide the Scorpion connecting pipe over the headers and align the mounting bracket with the original mounting point on the bike.

T) From the left side of the bike screw the original mounting bolt into the bracket. Leave loose for now.

NOTE: If installing with the Scorpion Slip-on silencer skip steps U & V and follow steps F to H on the Slip-on instructions instead.




U) Slide the silencer onto the connecting pipe. You do not need the gasket.



V) Attach the silencer to the frame with the original mounting hardware. Leave slightly loose to allow for adjustment, you will tighten it in a later step.

W) Install the springs between the headers and the connecting pipe.

X) Fully tighten the header nuts.

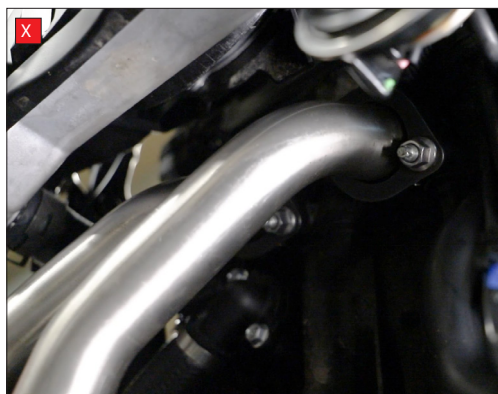

| | | | |
|-------|---|-----------|---------------------------------|
| Bike | Yamaha Tenere 700 | Part No. | RYA-122-MA |
| Year | 2021-Current | Fit Kits | Z039.10719 |
| Notes | Where not supplied use original fittings. Remove Gasket for OE Silencer or Scorpion Slip-on. | dB Killer | dB-Killer provided with Slip-on |

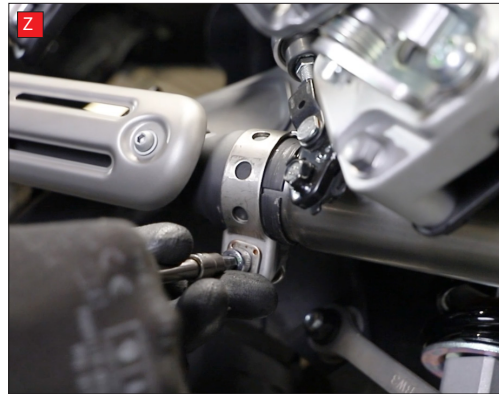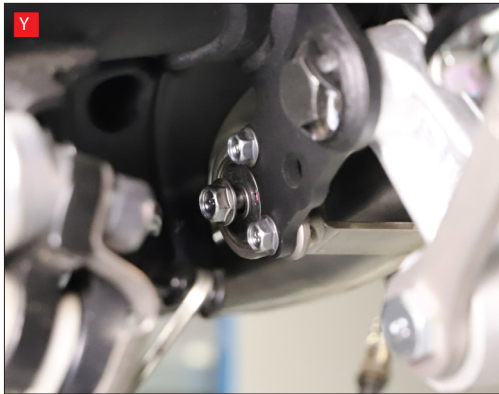


Y) Fully tighten the connecting pipe mounting bolt.

NOTE: If installing with the Scorpion Slip-on silencer skip steps Z & AA and follow steps I to M on the Slip-on instructions instead.

Z) Tighten the rear silencer clamp.

AA) Tighten the rear silencer mounting bolt.

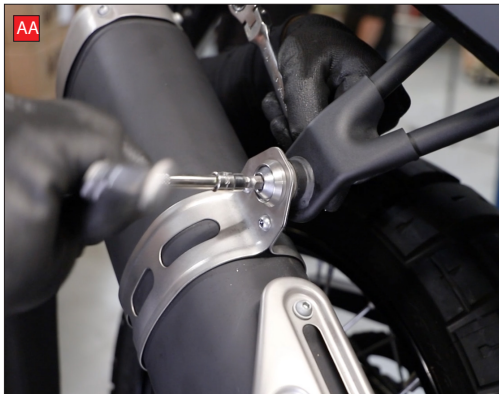


AB) Re-install the lambda sensor.

AC) Plug the sensor into the extension cable and clip the cable to the frame in the original positions.

AD) Re-install the inner side panel, this is the reversal of the removal steps.


AE) Reconnect the indicator wiring plug.

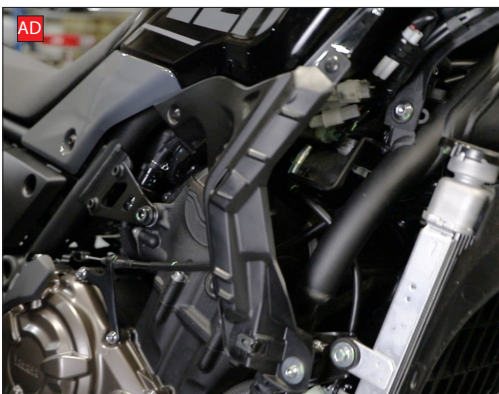

AF) Re-install the side panel screws, this is the reversal of the removal steps.



| | | | |
|-------|---|-----------|---------------------------------|
| Bike | Yamaha Tenere 700 | Part No. | RYA-122-MA |
| Year | 2021-Current | Fit Kits | Z039.10719 |
| Notes | Where not supplied use original fittings. Remove Gasket for OE Silencer or Scorpion Slip-on. | dB Killer | dB-Killer provided with Slip-on |

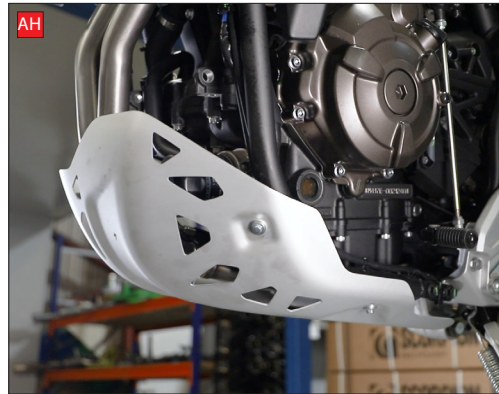

AG) Re-fit the plastic screws that hold the radiator cover to the side panel.

AH) Re-install the skid plate.

Take the bike for a short ride to ensure it functions as it should. Once the bike and exhaust are cool enough check all nuts and bolts are still secure.



STAY CONNECTED TO RED POWER.