
## **FITTING INSTRUCTIONS 1**

Box.	PLOCK	1

BIKE	Ducati 1098 /1098 S	PART NO.	EDI - 61
YEAR	2007-08	FIT KITS	OVAL Z039.11274
NOTES	Where not supplied use original fittings	DB-Killer	SCEXDBK12 - (Type B)

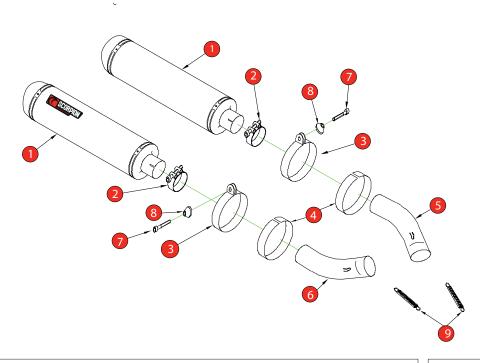

- 1 2 x 275mm Oval Silencers ESC120
- 2 2 x 51-55mm Band Clamp (Z016.10002)
- 3 2 x Stainless silencer strap (Z028.10208)
- 4 2 x Silencer Strap Rubbers (Z028.10022)
- 5 Connecting Pipe CP 457
- 6 Connecting Pipe CP 458
- 7 2 x M8 x 30mm Cap Head Bolts (Z017.10074)
- 8 2 x Alloy Bolt Finisher (Z026.20068)
- 9 2 x Rubber Coated Springs (Z028.10030)

E-MARK ROUND	N/A
E-MARK OVAL	BSAU 193a 1990/t3
DATE	08/10/2018
AUTHORISED	J.Harkin
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



- A) Remove original exhaust from bike, taking care to keep all original components in a safe place.
- B) Refit Scorpion exhaust as per line diagram above.
- C) When fitted take bike for a short ride to ensure all functions are correct.
- D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

