


Box: PLOCK 2x2

BIKE	YAMAHA XJR 1300	PART NO.	EYA - 72
YEAR	2004 - 2006	FIT KITS	OVAL Z039.11191 // ROUND Z039.10191
NOTES	Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	2 x SCEXDBK12 - (Type B)

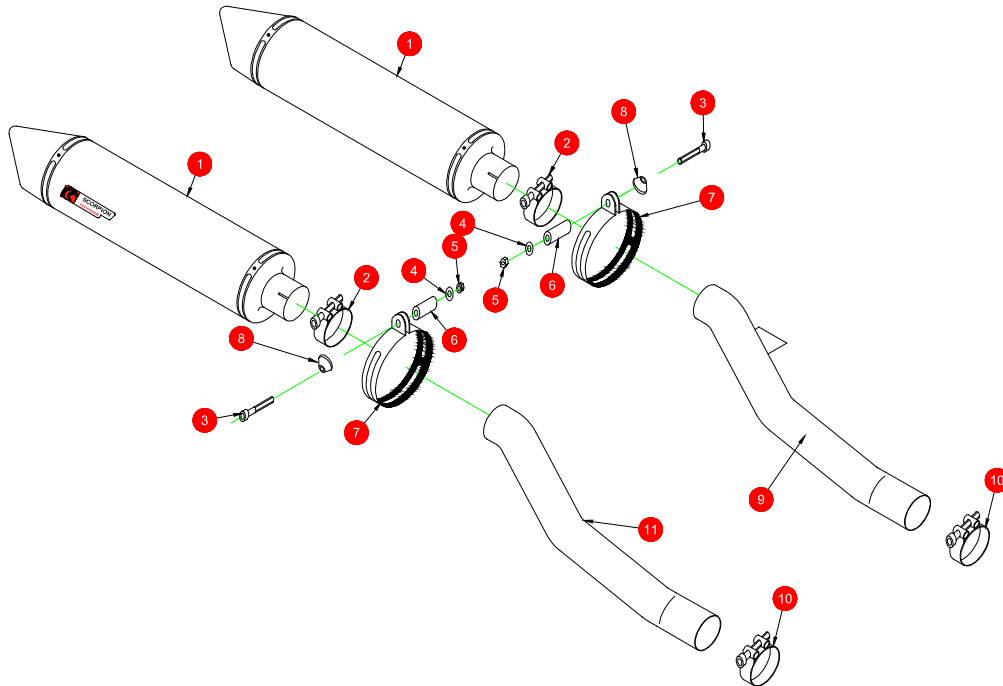

- | | |
|---|---|
| 1 2 x 350mm Silencers ESC 55 | 8 2 x Aluminium Bolt Finishers (Z026.20068) |
| 2 2 x 51-55mm Band Clamps (Z016.10002) | 9 Connecting Pipe CP73 |
| 3 2 x M8 x 50mm Cap Head Bolts (Z017.10825) | 10 2 x 47-51mm Band Clamps (Z016.10003) |
| 4 2 x M8 x 25mm Washers (Z017.10825) | 11 Connecting Pipe CP 74 |
| 5 2 x M8 Nyloc Nuts (Z017.10062) | |
| 6 2 x 10mm Aluminium Spacers (Z026.10004) | |
| 7 2 x Composite Straps (R-Z038.10090)(O-Z038.10088) | |

E-MARK ROUND	BSAU 193a 1990/t3
E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	10
DATE	22/10/2018
AUTHORISED	J,Harkin
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.