
Box: PLOCK 1			FITTING INSTRUCTIONS 1
BIKE	BMW R1200 GS	PART NO.	EBM-56
YEAR	2004-09	FIT KITS	Z039.11188
NOTES	Use standard fittings where not supplied. Remove standard gasket if fitted.	DB-Killer	SCEXDBK12 - (Type B)

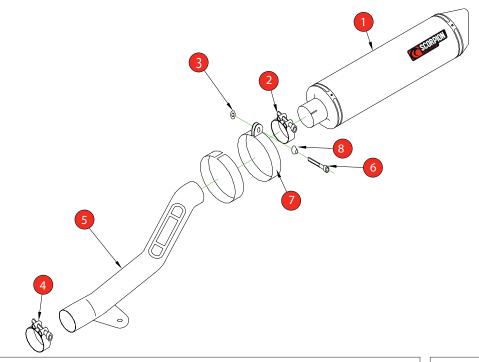

8 Aluminium Bolt Finisher (Z026.20068)

9 Silencer Strap Rubber (Z029.10022)

10 Bump Stop Kit (Z017.10010)

1 450mm Silencer ESC 50

- 2 51-55mm Band Clamp (Z016.10002)
- 3 M8 X 25mm Washer (Z017.10825)
- 4 55-59mm Band Clamp (Z016.10004)
- 5 Connecting Pipe CP264
- 6 M8 X25mm Cap Head Bolt (Z017.10073)
- 7 Oval Silencer Strap (Z028.10231)

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



E-MARK ROUND	N/A	
E-MARK OVAL	SCDB-OS e4 2072	
ISSUE NO.	9	
DATE	28/09/2018	
AUTHORISED	J.Harkin	
CHECKED		

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

