


Box: PLOCK 1

BIKE	BMW F650 GS, 2000-07 / DAKAR GS650 F/ G650 GS, 2011-16	PART NO.	EBM-50
YEAR	2000-2006	FIT KITS	OVAL Z039.11139
NOTES	Where not supplied use original fittings.	FEATURES	DB KILLER Z038.10120

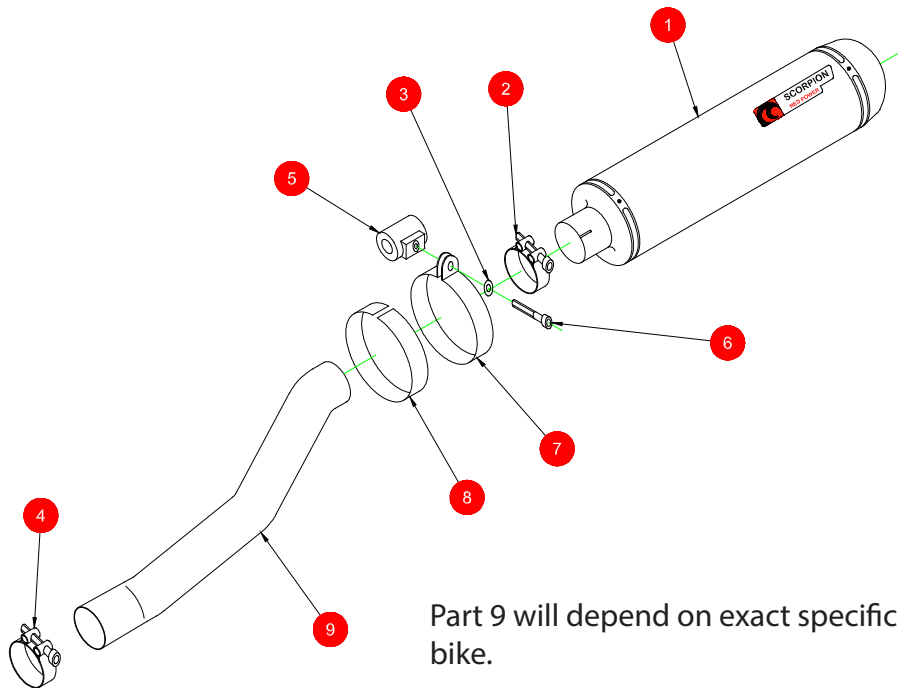

Part 9 will depend on exact specification/fitment of bike.

- |                                      |                                      |
|--------------------------------------|--------------------------------------|
| 1 400mm Oval Slip on Silencer ESC95  | 8 Silencer Strap Rubber (Z029.10022) |
| 2 51-55mm Band Clamp (Z016.10002)    | 9 Connecting Pipe CP125/CP 125A      |
| 3 Alloy Bolt Finisher (Z026.20068)   |                                      |
| 4 43-47mm Band Clamp (Z016.10008)    |                                      |
| 5 Bush Mount Assembly (Z028.10194)   |                                      |
| 6 M8x16mm Cap Head Bolt (Z017.10808) |                                      |
| 7 Silencer Strap (Z028.10231)        |                                      |

E-MARK ROUND	N/A
E-MARK OVAL	SCBM-O <a href="#">e4</a> 2135
ISSUE NO.	9
DATE	16/04/09
AUTHORISED	S.Northrop
CHECKED	

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

- A) Remove original exhaust from bike, taking care to keep all original components in a safe place.
- B) Refit Scorpion exhaust as per line diagram above.
- C) When fitted take bike for a short ride to ensure all functions are correct.
- D) When bike & exhaust are cool enough check all nuts and bolts are still secure.