


Box: P-LOCK 2x2

BIKE	Triumph Street Triple 675	PART NO.	ETR-64
YEAR	2007-12	FIT KITS	OVAL Z039.11303 // ROUND Z039.10303
NOTES	Where not supplied use original fittings	DB-Killer	2 x SCEXDBK12 - (Type B)

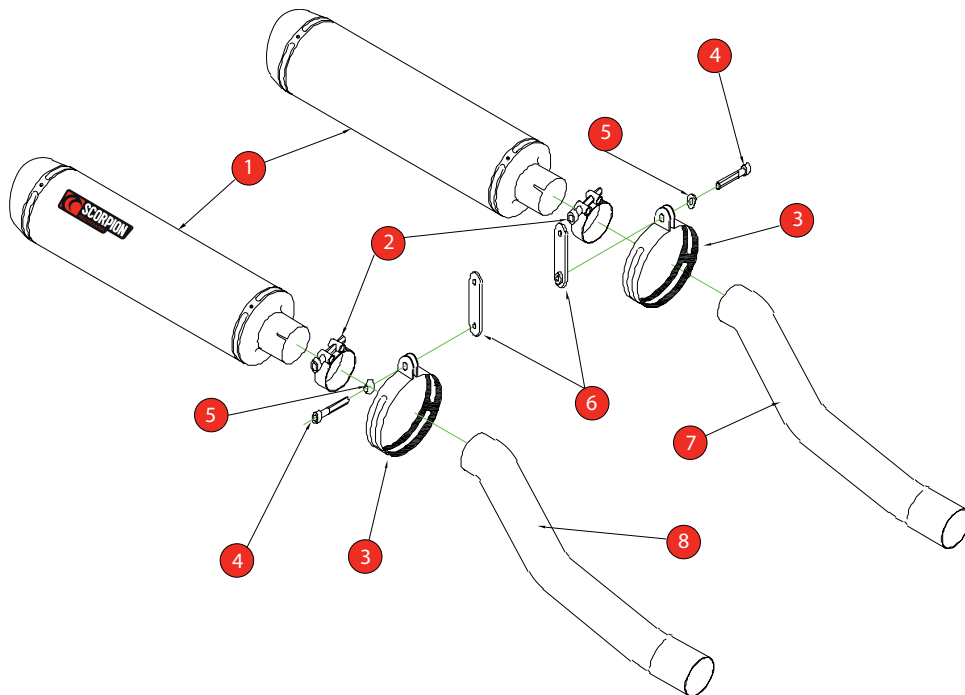

- | | |
|---|--------------------------|
| 1 2 x 300mm Silencers ESC 136 | 8 Connecting Pipe CP 472 |
| 2 2 x 51-55mm Band Clamps (Z016.10002) | |
| 3 2 x Composite Straps (O-Z038.10088)(R-Z038.10090) | |
| 4 2 x M8 x 20mm Cap Head Bolts (Z017.10072) | |
| 5 2 x Alloy Bolt Finishers (Z026.20068) | |
| 6 2 x Mounting Brackets (Z015.10072) | |
| 7 Connecting Pipe CP 473 | |

E-MARK ROUND	BSAU 193a 1990/t3
E-MARK OVAL	BSAU 193a 1990/t3
ISSUE NO.	04
DATE	13/04/21
AUTHORISED	M.Ydlibi
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.