
	Box: PLOCK 1]		FITTING INSTRUCTIONS
	BIKE	KAWASAKI ZX6 R	PART NO.	KA-102
_	YEAR	2009- 2012	FIT KITS	Z039.20484
	NOTES	Where not supplied use original fittings.	FEATURES	

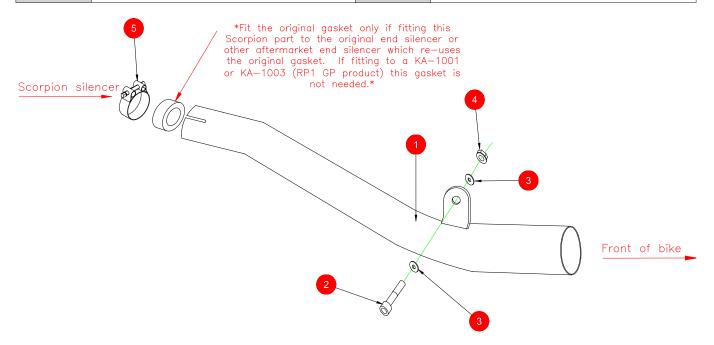

1 Connecting Pipe CP720

- 2 M10x60 Hex Head Bolt (Z017.10115)
- 3 2 x M10x25mm Washers (Z017.11015)
- 4 M10 Nyloc Nut (Z017.10103)
- 5 63-68mm Clamp (Z016.10005)

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



AUTHORISED S.PEPPER CHECKED

2

07/03/13

RACE USE ONLY

E-MARK

ISSUE NO.

DATE

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

