
## **FITTING INSTRUCTIONS 1**

Box: PLOCK 2			
BIKE	BMW R1200GS	PART NO.	EBM - 65
YEAR	2010 - 12	FIT KITS	OVAL Z039.11372
NOTES	Does Not Fit with OE Panniers Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	SCEXDBK12 - (Type B)

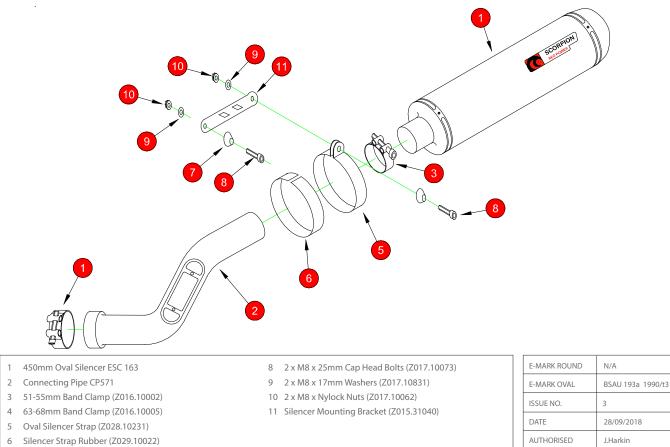

- 2 x Alloy Bolt Finisher (Z026.20068) 7

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

CHECKED

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

