


| | | | |
|--------------|--|------------------|----------------------|
| Bike | Honda CB750 Hornet | Part No. | RHA-200 |
| Year | 2023-Current | Fit Kit | Z039.10731 |
| Notes | Where not supplied use original fittings | dB Killer | SCEXDBK24 - (TYPE W) |


Estimated Fitting Time: 30 Minutes

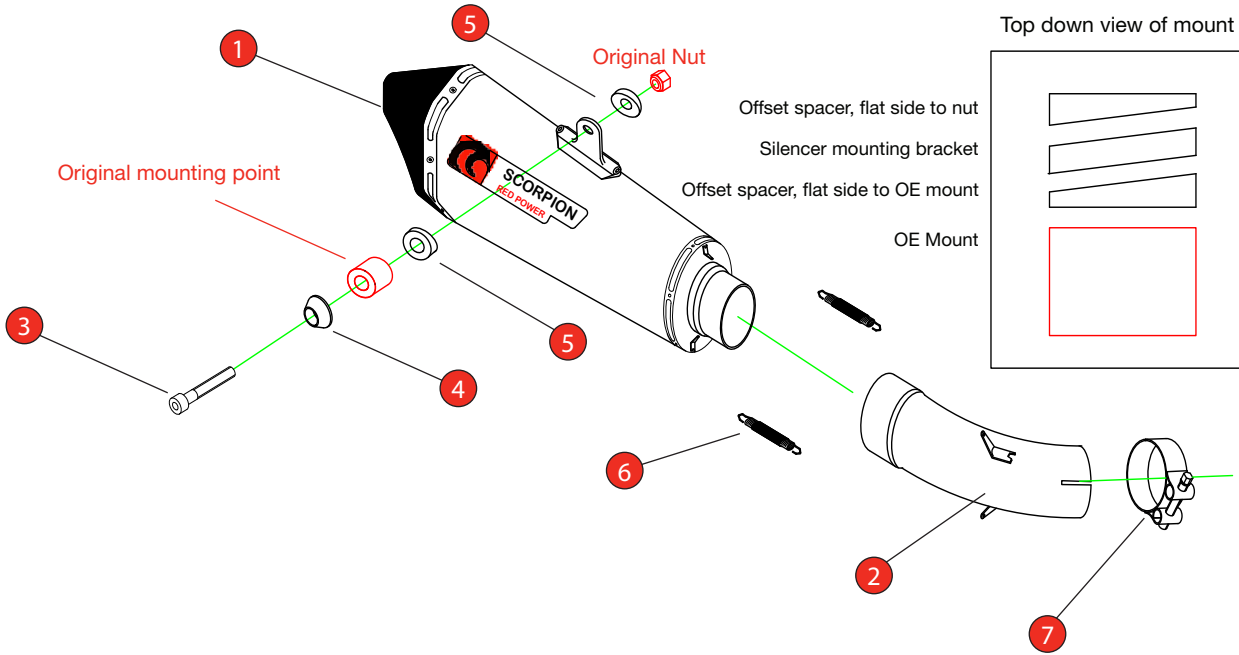

| NO. | PART NO. | DESCRIPTION | QTY |
|-----------------------------|------------|------------------------|-----|
| 1 | RSC520 | Serket Taper Silencer | 1 |
| 2 | CP1181 | Connecting Pipe | 1 |
| Fit Kit - Z039.10731 | | | |
| 3 | Z017.10079 | M8 x 55mm Caphead Bolt | 1 |
| 4 | Z026.20068 | Alloy Bolt Finisher | 1 |
| 5 | Z026.20353 | Offset Spacer | 2 |
| 6 | Z028.10030 | Rubber Coated Spring | 2 |
| 7 | Z016.10002 | 51-55mm Clamp | 1 |


| | |
|----------------|------------------------|
| CLASSIFICATION | Closed Circuit Product |
| HOMOLOGATED | NO |
| DATE | 13/11/2023 |
| ISSUE | 00 |
| AUTHORISED | S Shipley |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

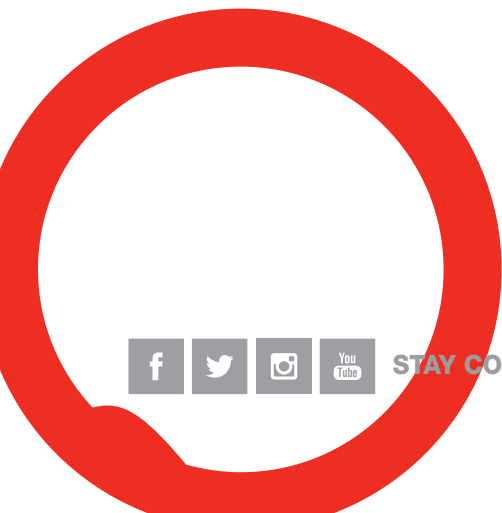

STAY CONNECTED TO RED POWER.

| | | | |
|-------|--|-----------|----------------------|
| Bike | Honda CB750 Hornet | Part No. | RHA-200 |
| Year | 2023-Current | Fit Kits | Z039.10731 |
| Notes | Where not supplied use original fittings | dB Killer | SCEXDBK24 - (TYPE W) |

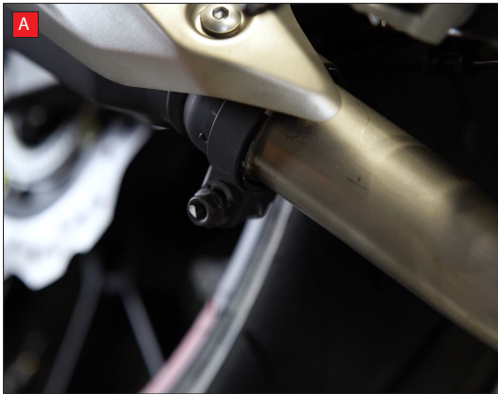

NOTE: The instructions show fitting of the Red Power Slip-on, the Serket Taper Slip-on fits the same way.

A) Loosen the clamp on the rear silencer.

B) Remove the rear silencer mounting bolt.

C) Carefully remove the rear silencer. If the gasket stays on the pipe remove that as well as it's not needed with the Scorpion Slip-on.

D) Slide the connecting pipe along with the clamp onto the original exhaust.

E) Slide the supplied bolt and bolt finisher through the original silencer mounting point on the bike.

F) Slide the offset spacer over the mounting bolt with the flat side facing the OE mount and the small side towards the back of the bike.

G) Slide the Scorpion silencer onto the connecting pipe and align the mounting bracket with the bolt.

H) Place the 2nd offset spacer onto the bolt. The mitred side should be facing the Scorpion bracket and the large end of the spacer facing the back of the bike.

| | | | |
|-------|--|-----------|----------------------|
| Bike | Honda CB750 Hornet | Part No. | RHA-200 |
| Year | 2023-Current | Fit Kits | Z039.10731 |
| Notes | Where not supplied use original fittings | dB Killer | SCEXDBK24 - (TYPE W) |




I) Secure in place with the original mounting nut but don't fully tighten at this stage.

J) Attach the springs between the spring hoops.

K) Fully tighten the clamp.

L) Fully tighten the silencer mounting bolt.

Take the bike for a short ride to ensure all functions are correct. When the bike & exhaust are cool enough check all nuts and bolts are still secure.

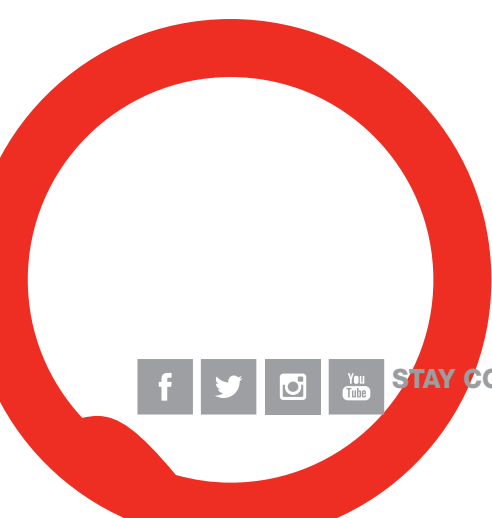

STAY CONNECTED TO RED POWER.

| | | | |
|--------------|--|------------------|----------------------|
| Bike | Honda CB750 Hornet | Part No. | RHA-200 |
| Year | 2023-Current | Fit Kit | Z039.10731 |
| Notes | Where not supplied use original fittings | dB Killer | SCEXDBK24 - (TYPE W) |

Estimated Fitting Time: 30 Minutes



Thank you for purchasing your Scorpion Silencer.

Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Für den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.

Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.



STAY CONNECTED TO RED POWER.